

撮影箇所	番号	SS	ISO	F値	SONY AX-700	SONY FX30
暗い場所	暗い01	30	400	4.0		
暗い場所	暗い02	30	800	4.0		
暗い場所	暗い03	30	1600	4.0		
暗い場所 (拡大)	暗い03_2	30	1600	4.0	SONY AX700 ISO1600拡大 	SONY FX30 ISO1600拡大 

撮影箇所	番号	SS	ISO	F値	SONY AX-700	SONY FX30
暗い場所	暗い04	30	2500	5.6		
暗い場所 (拡大)	暗い04_2	30	2500	5.6	SONY AX700 ISO2500拡大 	SONY FX30 ISO2500拡大 
暗い場所	暗い05	30	8000	4.0		
暗い場所	暗い06	30	12800	4.0		